

Error No. 16: Battery Voltage

An error in the voltage supply of the controller occurs.

