

Error No. 9: Emergency Damping Valve

An error of the emergency damping valve output or its cabling.

